

Sunbeam

FEEL PERFECT HEATED THROW

User Guide

TRF4000 Reversible Micro Fleece and Sherpa Fleece

TRF4100 Cosy Microfleece

TRF4200 Soft Sherpa Fleece

TRF4300 Faux Fur

TRP4400 Micro Plush



Sunbeam[®]

FEEL PERFECT • HEATED THROW BLANKET

SHERPA FLEECE	
1, 3 OR 9 HOUR AUTO OFF	6 HEAT SETTINGS
120 cm x 160 cm PERFECT FOR ONE PERSON	10 MINUTE FAST HEAT UP

REST EASY WITH
SECURE SLEEP
PROTECTION

ultra soft
sherpa fleece
GREY

MACHINE
WASHABLE

TRF4200

Contents

Sunbeam's Safety Precautions	1
Safety Precautions for your heated throw	2
Sunbeam's SleepPerfect® Technology	3
Using your heated throw Troubleshooting	4
Troubleshooting	5
Care and cleaning	6

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used by children or infirm persons.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, contact Sunbeam's customer service team.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- If the appliance is slept on with the controls set to a higher temperature the user may suffer skin burns or heat stroke.
- Do not place heavy items on top of the appliance when it is turned on.
- It is recommended that a qualified engineer or registered person inspect the heated throw once it passes warranty period and every 2 years thereafter.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Safety Precautions for your Electric Throw

- Do not switch the throw rug on if moist or wet.
- Do not use pins, needles, safety pins or other sharp items on your electric throw.
- Examine periodically for signs of wear or damage on the throw rug cords. If there are such signs, or the throw rug has been misused, return it to an authorised service agent for inspection.
- Only use your electric throw with the controls supplied or marked equivalent.
- Not to be used by very young children (0-3 years), infirm persons, or persons insensitive to heat.
- The appliance is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- Ensure that the electric throw is switched off and unplugged after use.
- This electric throw is not intended for use in hospitals.
- If appliance is used on an adjustable bed, check that the throw rug and cord do not become trapped or rucked, for example in hinges.
- When storing the appliance allow it to cool down before folding.
- Do not crease the appliance by placing items on top of it during storage.
- Should your appliance suffer a thermal or fuse link rupture (normally identified when the throw rug stops heating) please return it to the manufacturer or agent for repair or replacement.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of three are not to use this appliance due their inability to react to overheating.
- Use as an overblanket only.
- Heat settings 1-3 are for continuous or all night use. If this appliance is slept on with the controls set to a higher temperature, the user may suffer skin burns or heat stroke.

Important instructions – retain for future use.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Care Label Symbols



Attention



Instruction Booklet - Please read the instructions thoroughly before use

Sunbeam's SleepPerfect® Technology

Temperature sensitive, fast-heating elements

All Sunbeam Feel Perfect electric throws feature our exclusive SleepPerfect® technology. This technology uses a unique heating element that adjusts the heat level of your electric throw to maintain your selected setting.

A built-in microprocessor continually senses changes in room and body temperature and adjusts the power input accordingly, to provide a constant level of comfort.

The unique flexible heating element allows the fabric to drape around you, enabling the heated throw to be used on the lounge or your favourite arm chair.

This unique element also heats up to reach your selected temperature in just 10 minutes, so there's no need for hours of preheating.

Nine levels of safety protection

A built-in microprocessor constantly senses the resistance of the heating wire and adjusts the power input accordingly. It senses any rise in temperature and reduces the power supply to prevent overheating.

In the unlikely event of a fault, the microprocessor senses the abnormal operation and automatically cuts off power to the throw.

A second microprocessor acts as a back up should the first fail.

For additional safety protection, all Feel Perfect electric throw rugs contain a thermal back up fuse that is independent of the throw rug control. It detects any abnormal temperature variations in the heating element and automatically switches the throw off to prevent overheating.

Using your heated throw

Using your heated throw

Your heated throw can be used on the lounge or in your favourite chair, providing cosy comfort wherever you need it. It can even be used on futons, adjustable beds and waterbeds.

Connecting the control

Insert the control connector into the socket, making sure it is firmly clicked into position. Plug the control into a 230-240V power outlet and turn the power on.

Note: Ensure that the control is connected to the heated throw before inserting the plug into the power outlet. Connecting the power before attaching the control to the throw rug will replicate a power interruption and activate the safety system, preventing the throw from heating.

Caution: Keep the control away from heating sources such as heaters and lamps. Do not cover the control.

Using your heated throw


Press the Power button to turn the blanket on.

Your heated throw is supplied with a 6 heat control. Press the temperature button to toggle through each heat setting.

- 1-3 Continuous or all night use
- 4-5 Medium Pre-heat
- 6 Fast Pre-heat

Use Pre-heat settings to preheat the throw only. Do not use your heated throw on these settings more than 30 minutes.

Note: When pressing the power button, the heated throw will automatically turn to Setting 6 (Fast Pre-heat).

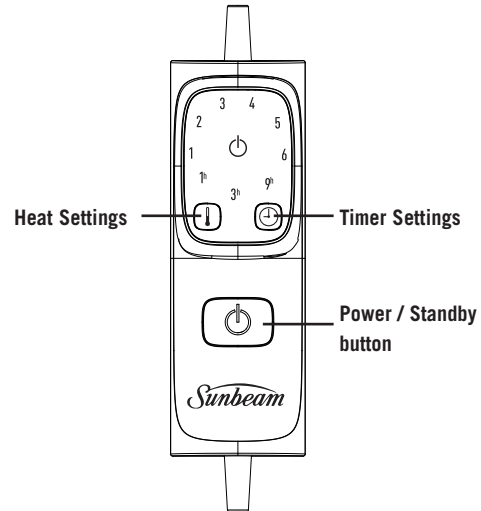

Safety Auto off

Your electric throw features a safety auto off with 1, 3 or 9 hours automatic stop, so you can choose the right warmth for you.

Simply press the Power button to reactivate.

Troubleshooting

Should your heated throw fail to heat

1. Check that the control is properly connected to the heated throw and clicked securely into position. If you find the control connector plug is not properly fitted to the heated throw, switch the power off at the power outlet, securely attach the control connector plug to the heated throw, and then switch the power back on.
2. Check that the power cord is connected to the power outlet and the power is switched on.

Care and cleaning

All Feel Perfect Heated Throws electric blankets feature waterproof heating elements, making them fully immersible and safe to wash by hand or machine.

Before cleaning your electric blanket, ensure that the controls are unplugged from the blanket.

Spot cleaning

Sponge the affected area using a neutral wool detergent or mild soap flakes mixed with lukewarm water. Sponge twice with clean water to remove detergent. Remove excess water by compressing the wet area between two towels.

Hand washing

Wash the blanket in lukewarm water with a neutral wool detergent or mild soap flakes. Soak for five minutes, then gently squeeze the soapy water through the fabric. Rinse thoroughly in clean, lukewarm water then drain excess water from the blanket. Do not wring.

Machine washing

Take your electric blanket to a commercial laundry or wash in a domestic washing machine (svpermitting). Wash on WOOL or DELICATES cycle with a neutral wool detergent or mild soap flakes, below 40°C. Do not use high speed or extra spin cycles.

Line drying

Drape the blanket across several lines of your clothesline, and try to avoid direct heat. Do not use pegs on the wired areas. Do not dry with a hairdryer or heater. Ensure that the blanket and control sockets are completely dry before using again.

Machine drying

Tumble dry your blanket on LOW setting for 15 minutes MAXIMUM. Smooth the blanket by gently pulling any creases out of the fabric. Line dry to ensure the blanket and control sockets are completely dry before use. Do not dry with a hairdryer or heater.

Storing your blanket

Your blanket can remain on the bed all year round as a comfortable underblanket. Simply remove the controls and store until winter. If you wish to remove the blanket from your bed when not in use, roll or fold it loosely and store in a blanket bag or the bag it was supplied in. Avoid pressing sharp creases into the blanket.

Do not place heavy items on top of your electric blanket when storing.

When storing the electric blanket, allow it to cool down before folding.



This Sunbeam product is covered by a **3 year** replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or

- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Australia

www.sunbeam.com.au
1300 881 861
Suite 1, Level 1,
13 Lord Street,
Botany NSW 2019
Australia

New Zealand

www.sunbeam.co.nz
0800 786 232
Level 6, Building 5,
Central Park,
660-670 Great South Road,
Greenlane, Auckland
New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia | visit www.sunbeam.com.au
phone 1300 881 861
mail Suite 1, Level 1, 13 Lord Street,
Botany NSW 2019 Australia.

New Zealand | visit www.sunbeam.co.nz
phone 0800 786 232
mail Level 6, Building 5,
Central Park,
660–670 Great South Road, Greenlane,
Auckland.

Sunbeam Corporation is a division of Newell Brands
NEWELL AUSTRALIA PTY LTD. ABN 68 075 071 233

Sunbeam is a registered trade mark.

Feel Perfect is a registered trade mark of Sunbeam Corporation

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise,
the product you buy may differ slightly from the one shown here.

Approved by the appropriate electrical regulatory authorities.

©Sunbeam Corporation Limited 2020.

09/20